

Large Recording Photo Album

OWNER'S MANUAL — Please read before using this equipment.

Your RadioShack Large Recording Photo Album uses the latest digital recording technology to let you record new messages as many times as you like, without any tapes to change. You can record and play back up to 20 messages, one for each page of photographs.

INSTALLING BATTERIES

Your Large Recording Album uses two AAA batteries (not supplied) for power. For the longest life and best performance, we recommend alkaline batteries, available at your RadioShack store.

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

Follow these steps to install batteries.

1. Slide the battery compartment cover in the direction of the arrow to remove it.
2. Place the batteries in the compartment as indicated by the battery icons to the right of the battery door.
3. Replace the cover.

When the album's sound weakens or the display dims, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the album for a month or more, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

LOADING THE PICTURES

The Large Recording Photo Album contains 20 pages of adhesive paper with transparent covers. Use your imagination to decorate and arrange photos on the adhesive paper.

1. Open the album and turn to the desired page.
2. Lift up the transparent cover from the position marked **OPEN**.
3. Arrange the photos on the adhesive paper, then seal with the transparent cover to protect the photos.

Note: The page number corresponds to the recorded message number. Before recording, make sure the message number matches the photo page number.

RECORDING A MESSAGE

The Large Recording Photo Album lets you record up to 20 memory messages (01–20) for the pictures on the album pages. For each page, you can record one message up to 9 seconds.

1. Press **POWER**. The POWER indicator lights and - - appears.
2. Slide **LOCK/REC** to **REC**.
3. Open the album to the desired page, then repeatedly press << or >> until the desired number appears on the display. For example, if you want to record message for Page 5, repeatedly press << or >> until **05** appears.
4. To begin recording, press **REC** and **PLAY** simultaneously. The REC indicator lights and the recorder beeps once.
5. Speak into the microphone below the power button in a normal voice. After 9 seconds, the recorder automatically stops recording and beeps twice.
6. To stop recording sooner, press **REC** again. The recorder beeps and the REC indicator turns off.

Notes:

- To prevent accidental erasure after recording, slide **LOCK/REC** back to **LOCK**.
- To conserve the battery power when you are not using the recorder, press **POWER** to turn off the power.

PLAYING THE MESSAGE

1. Press **POWER**. The POWER indicator lights and - - appears.
2. Open the album to the desired page number, then repeatedly press << or >> to search for the corresponding message number.
3. Press **PLAY** to play the message.
4. To stop play before the message is over, press **PLAY** again. The recorder beeps once. To resume playing, press **PLAY** again.

Note: The message starts over from the beginning, not the point where it was stopped.

CLEARING ALL MESSAGES

Caution: This will permanently erase all of the recorded messages at once.

1. Set **LOCK/REC** to **REC**.
2. Hold down << and >> simultaneously. The REC indicator lights.
3. While still holding down << and >>, hold down **REC** for about 3 seconds. The album beeps twice when the memory is cleared.

CARE

To enjoy your Large Recording Photo Album for a long time:

- Keep the album dry. If it gets wet, wipe it dry immediately.
- Use and store the album only in normal temperature environments.
- Handle the album gently and carefully. Do not drop it.
- Keep the album away from dust and dirt.
- Wipe the album with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the album's internal components can cause a malfunction and might invalidate its warranty. If your album is not performing as it should, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Power Source	Two AAA batteries
Battery Life (Continuously Using)	40 Minutes
Recording Time	9 Seconds (Maximum)/Message
Operating Temperature	32 to 104° F (0 to 40° C)
Dimensions	8 ²⁹ / ₃₂ × 10 ¹¹ / ₁₆ × 3 ¹ / ₃₂ in (HWD) (226 × 271 × 25 mm)
Weight	28.92oz (820 g)

Specifications are typical; individual units might vary. Specifications are subject to change and improvement without notice.

Limited One-Year Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for one (1) year from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell

12/99